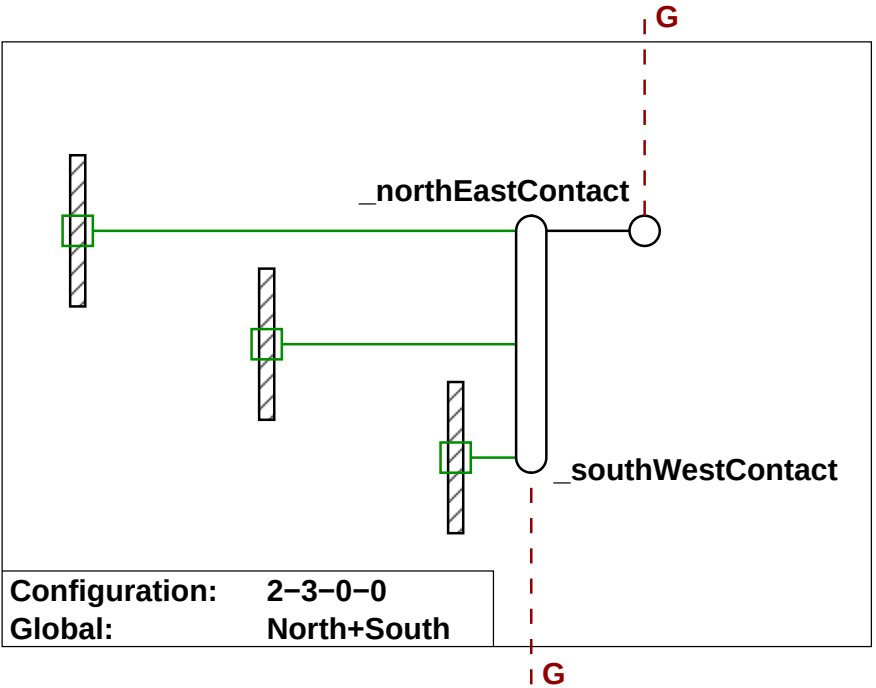
G
_northEastContact
_southWestContact
Configuration: 2−3−0−0
Global: North+South
G

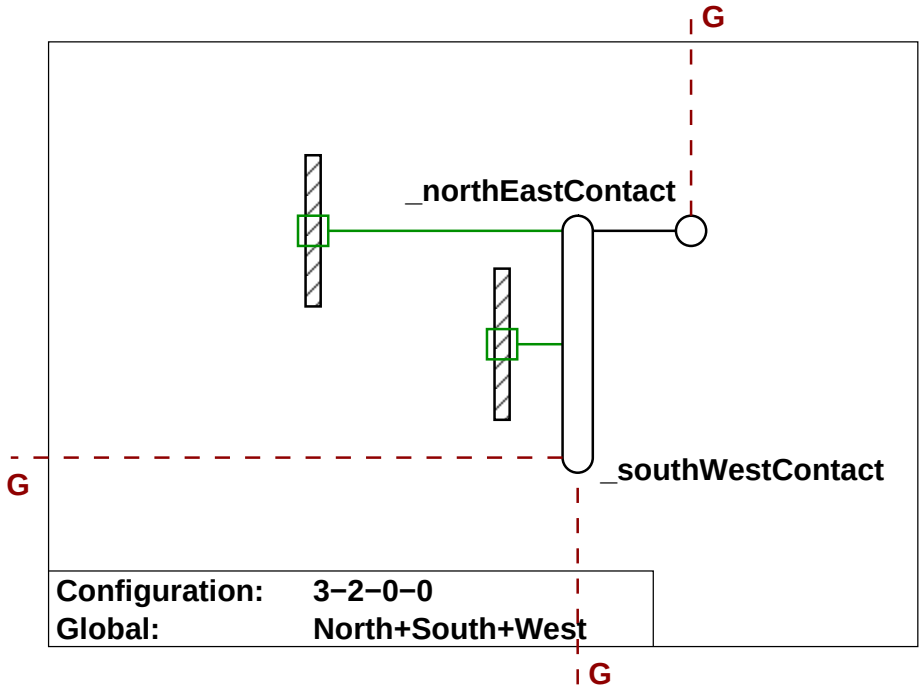
G
_northEastContact
G
_southWestContact
Configuration: 3−2−0−0
Global: North+South+West
G