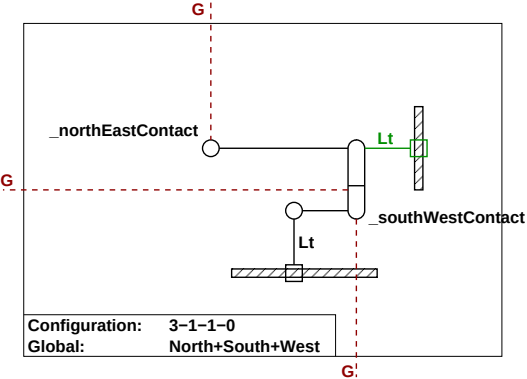
G
_northEastContact
Lt
G
_southWestContact
Lt
Configuration: 3−1−1−0
Global: North+South+West
G

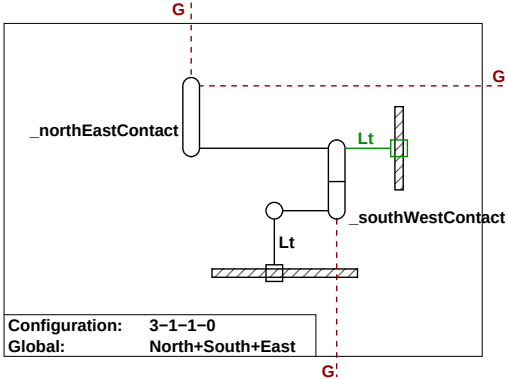
G
G
_northEastContact
Lt
_southWestContact
Lt
Configuration: 3−1−1−0
Global: North+South+East
G